





POMO Music - Manual

This manual is an instruction for using Music feature in POMO Waffle.

Add music to POMO Waffle

For Windows



- 1) Turn on POMO Waffle and connect with the computer with USB Cable.
- 2) Go to Drive of POMO Waffle. In this example, the Drive is "D:".

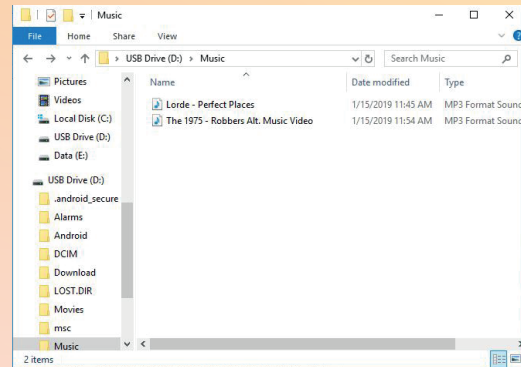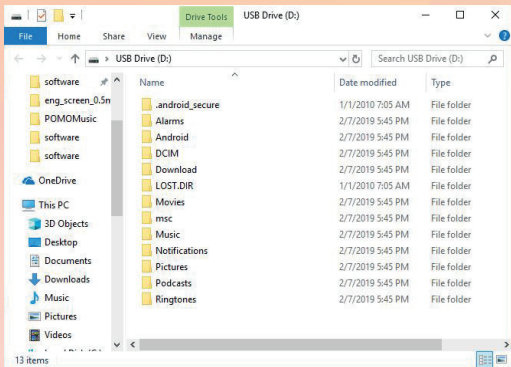

- 3) Copy music files and paste in Music directory. The file type should be '.mp3'.

For MacOS

- 1) Turn on POMO Waffle and connect with the computer with USB Cable.
- 2) Go to POMO Waffle device on the left bar of the finder.

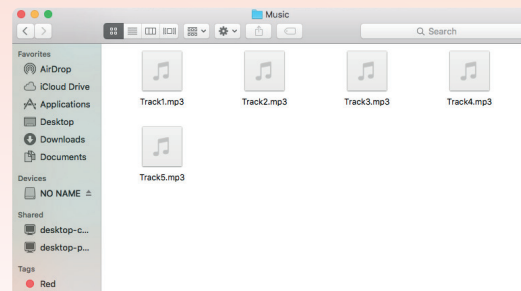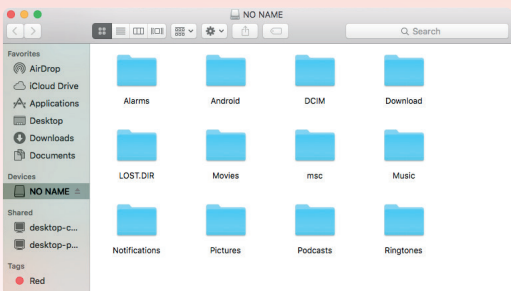


- 3) Copy music files and paste in Music directory. The file type should be '.mp3'.

Music Player Interface






1. Recent track
2. Shuffle
3. Track name and artist
4. Previous track
5. Pause / Play

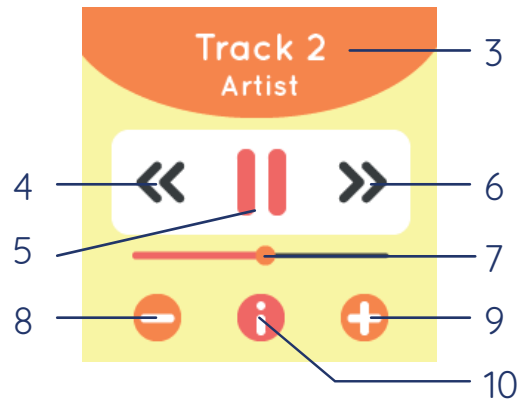




6. Next track
7. Control bar
8. Volume up
9. Volume down
10. Track information

Music Player instruction

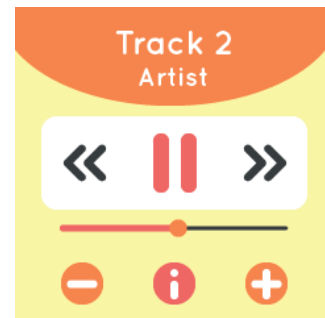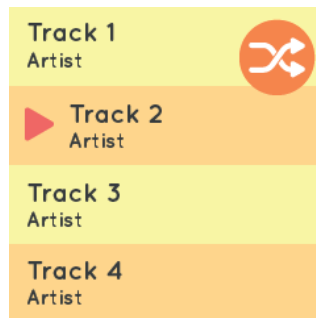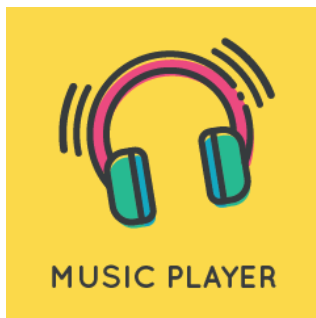

1. Find Music Player in POMO Waffle.
2. Choose the added track.
3. Enjoy the music.

Delete track from Music Player

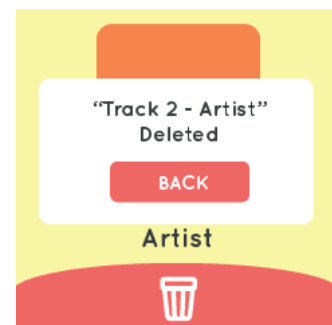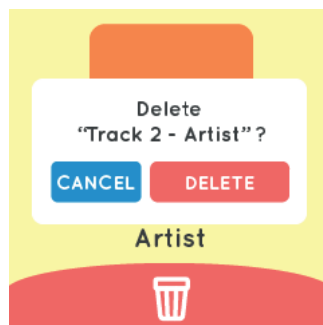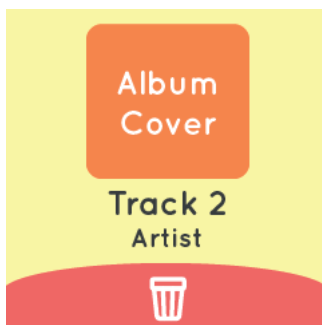

1. Press track information button.
2. Press the bin icon on the bottom of the screen
3. Press Delete. Then the track is deleted.